

## SHIPLAP CHIMNEY RANGE HOOD INSTALLATION INSTRUCTIONS:

- 1) Remove Shiplap Chimney Extension (shipped inside of Chimney Hood).
- 2) Locate available studs in area where the Shiplap Chimney Range Hood is to be installed.
- 3) Align Shiplap Chimney Range Hood so at least two screws will be secured through each mounting strip and into the available studs.
- 4) Refer to manufacturers guidelines that accompany stove/cook-top that will be located beneath Shiplap Chimney Range Hood.
- 5) Exposed wood edges should be no less than 30" above cooking surface.
- 6) Attach mounting strip (included) to wall using #8 x 2-1/2" framing screws.
- 7) Hang Shiplap Chimney Range Hood on mounting strip and secure to wall using minimum #8 x 2-1/2" framing screws.
- 8) Install ventilation power pack into steel liner as outlined in ventilator instructions.
- 9) Mount liner/ventilator assembly to inside of hood opening using available mounting holes and secure unit with wood screws (#8 x 5/8" not included).
- 10) Install ductwork or ductless kit according to ventilation manufacturer's guidelines.
- 11) Trim Shiplap Chimney Extension to desired height.
- 12) To install Chimney Extension over ductwork the back stretchers may have to be cut. Cut away just enough of the stretcher to fit around the ductwork.
- 13) Secure the Chimney Extension to the Chimney Hood by toe nailing the base of the extension to the hood with brad nails.

